

50806

# BOX ACTIVE BIKE 2 / 3




**AGURI**  
WWW.AGURI.EU




LIT Pritvirtinimo instrukcijos  
PL Instrukcja montażu  
CZ Návod na montáž  
SK Návod na montáž  
SLO Navodila za pritrjevanje  
HR Uputa za sastavljanje  
HU A felszerelés módja  
GR Οδηγίες συναρμολόγησης  
UA Інструкція з монтажу  
BY Інструкцыя па мантажы  
RO Instrucțiuni de montare  
TK Uydurma talimat  
N Monteringsveiledning

I Istruzioni per il montaggio  
GB Fitting instructions  
F Instructions de montage  
D Montageanleitung  
E Instrucciones de montaje  
NL Montage-instructies  
DK Monteringsinstruktion  
FIN Asennusohje  
S Monteringsanvisning  
RU Инструкция по установке  
PT Instruções de Montagem  
EST Paigaldusjuhend  
LAT Stiprināšanas instrukcija


# INSTALLATION PARTS FOR ACTIVE BIKE 2

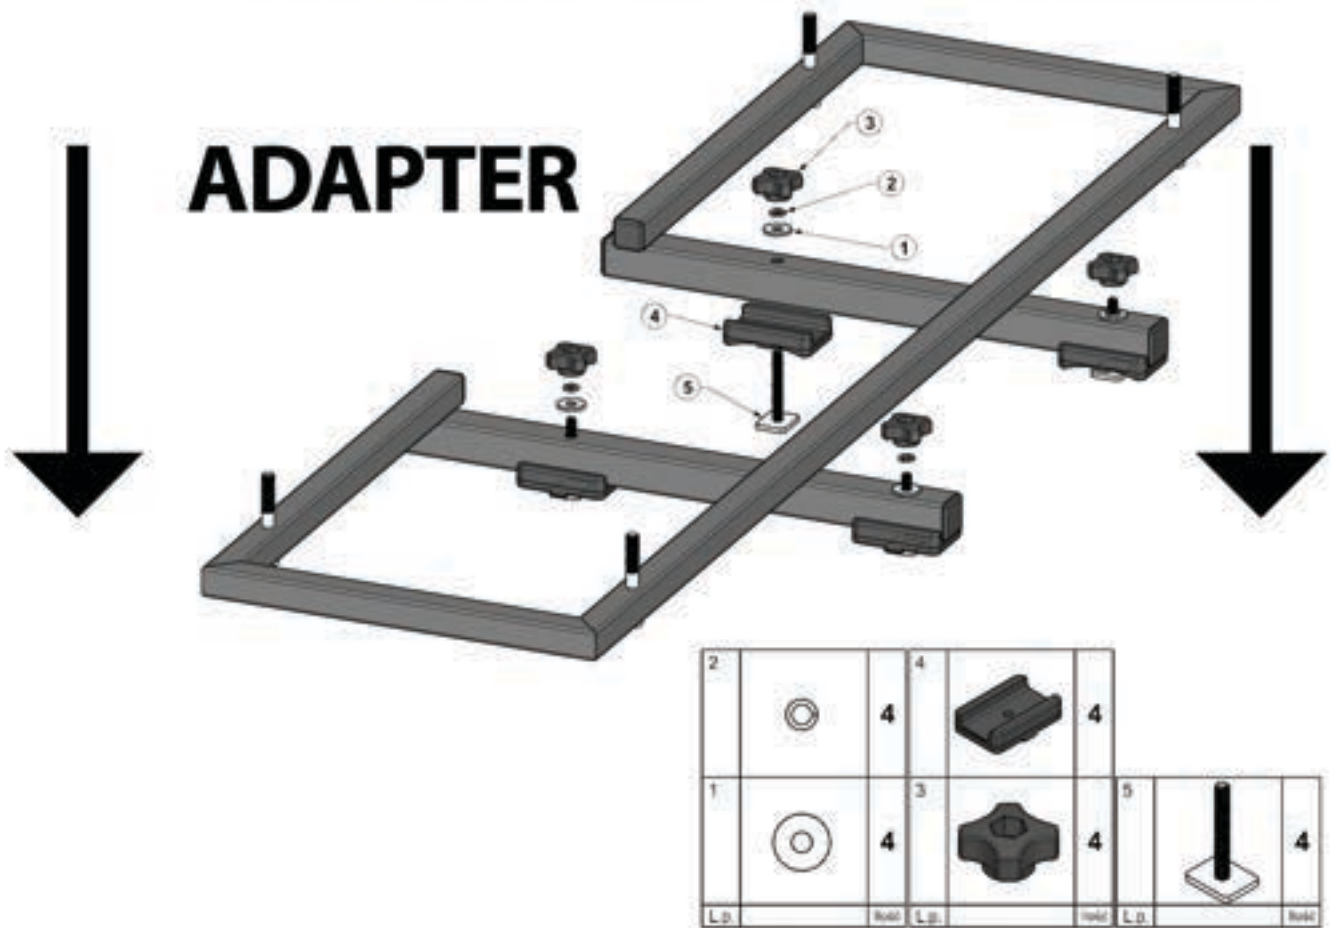


## ADAPTER INSTALLATION ACTIVE BIKE 2

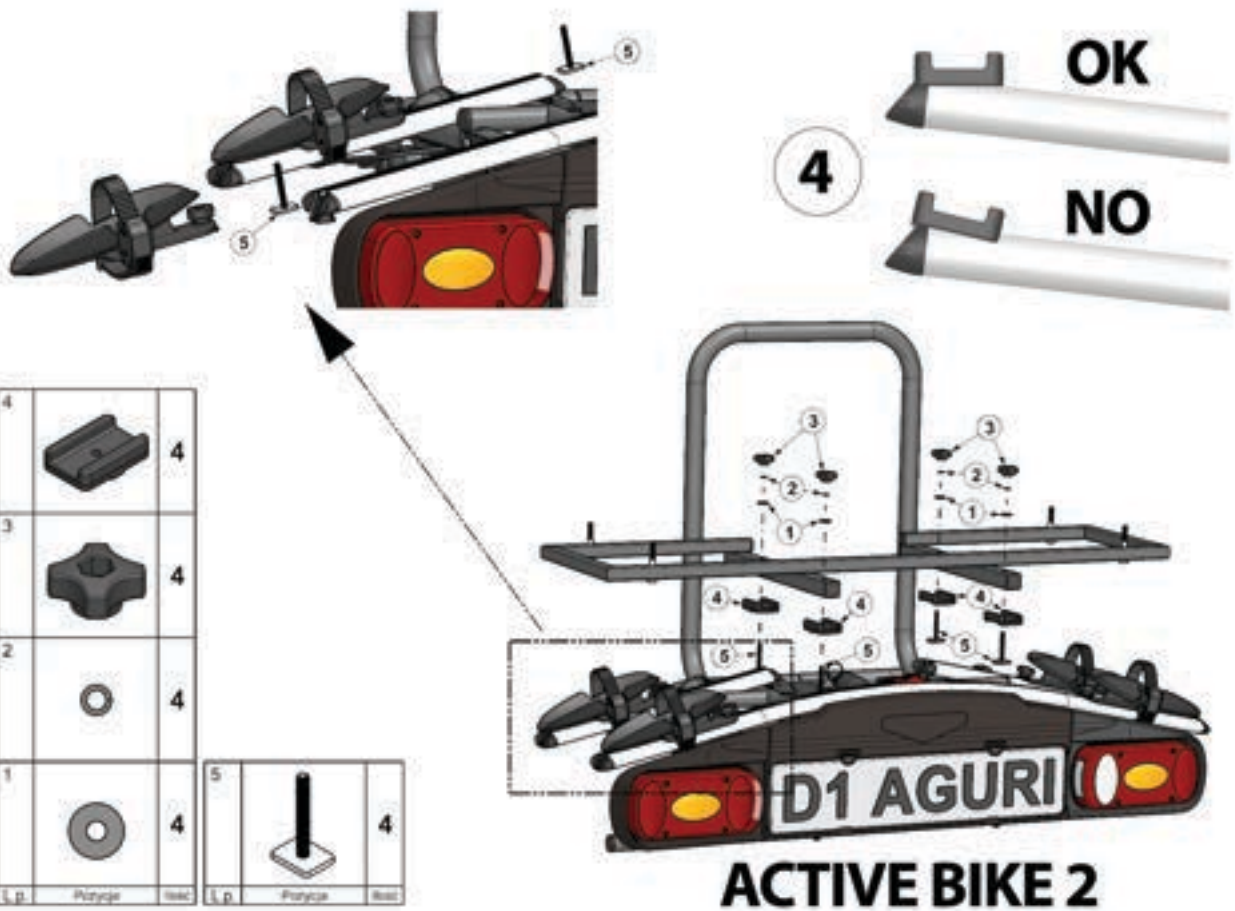


# INSTALLATION PARTS FOR ACTIVE BIKE 3

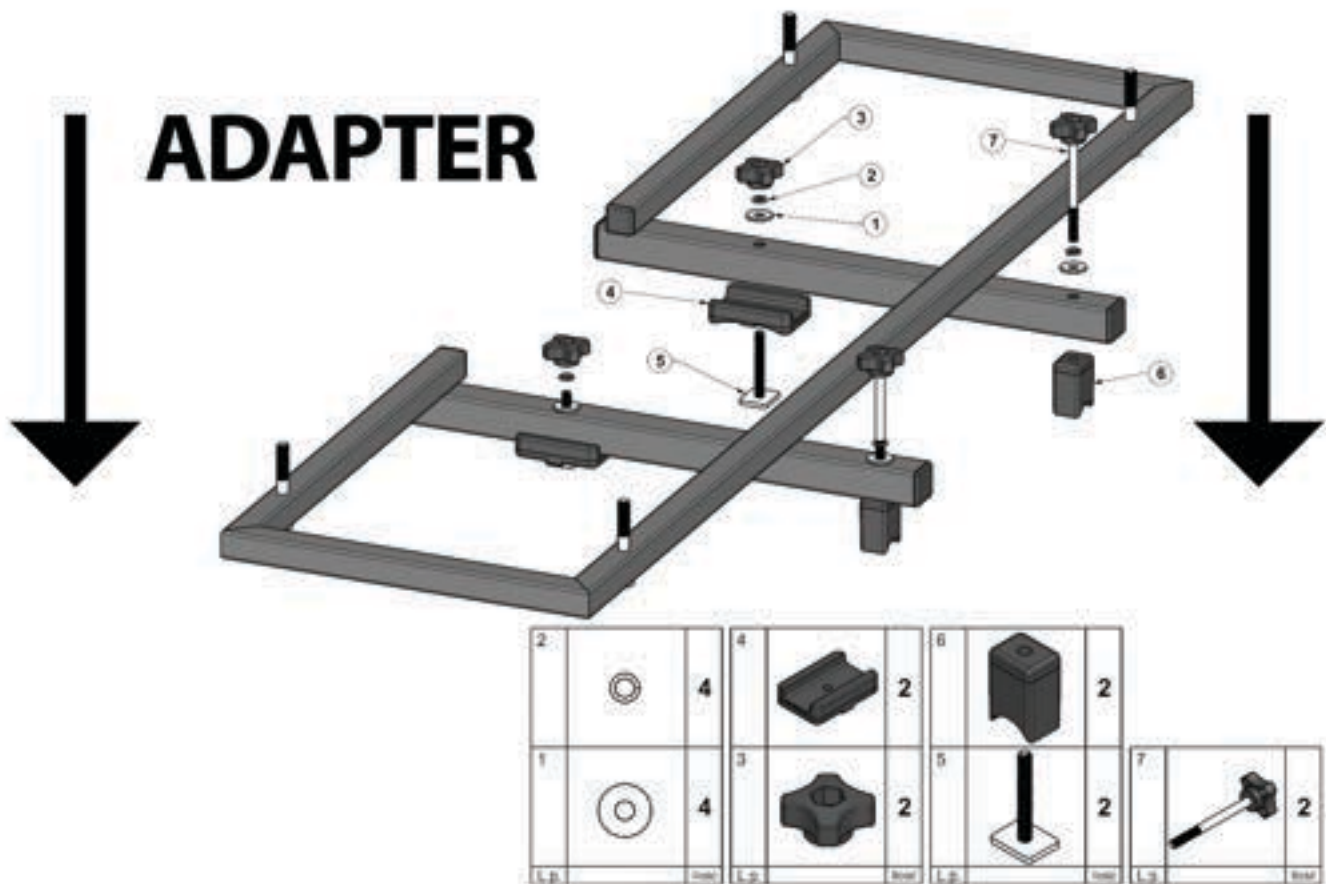

## ADAPTER INSTALLATION ACTIVE BIKE 3

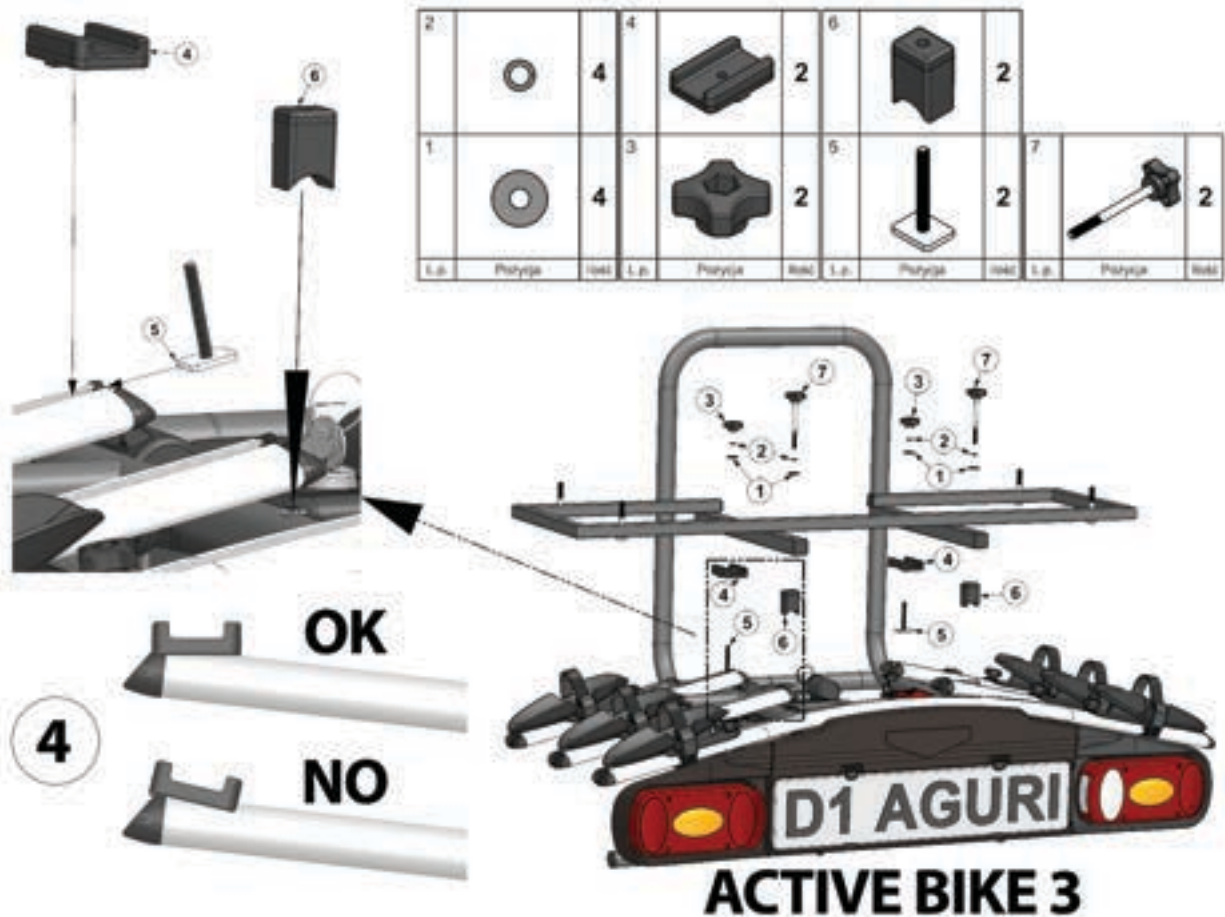



# BOX TO ADAPTER INSTALLATION

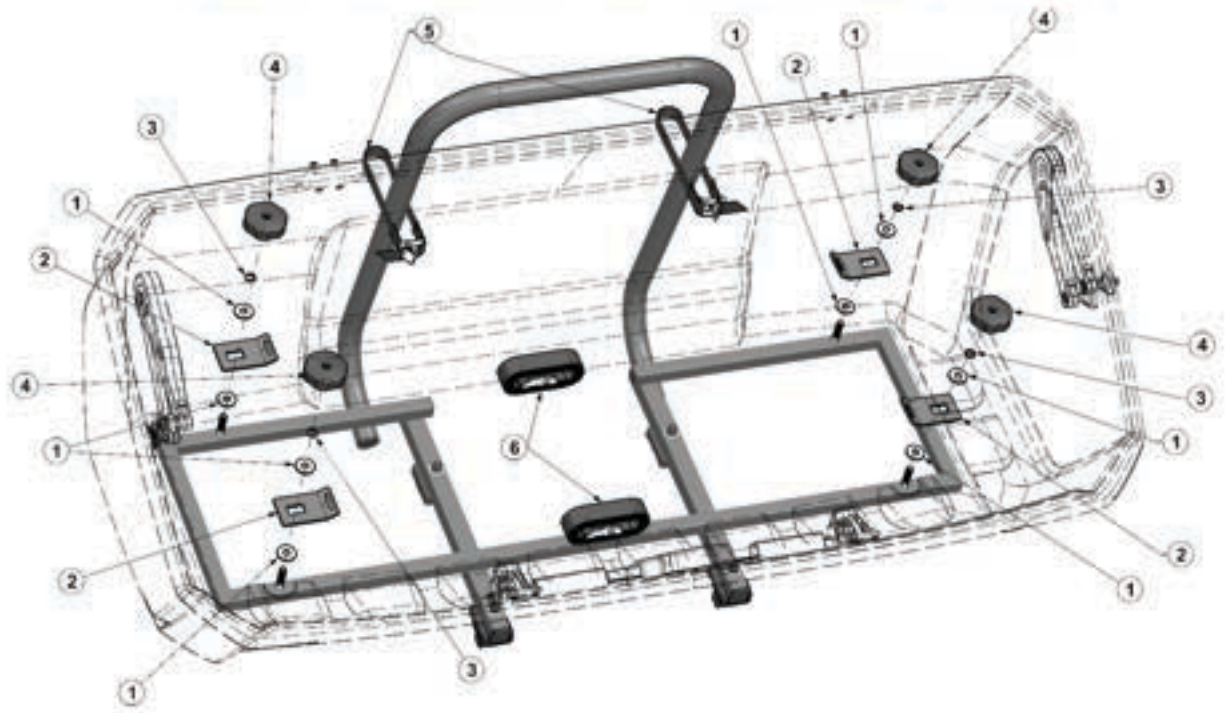

1		8	2		4	3		4	4		4	5		2	6		2
L.p.		Rosc	L.p.		Rosc	L.p.		Rosc	L.p.		Rosc	L.p.		Rosc	L.p.		Rosc

## BELTS

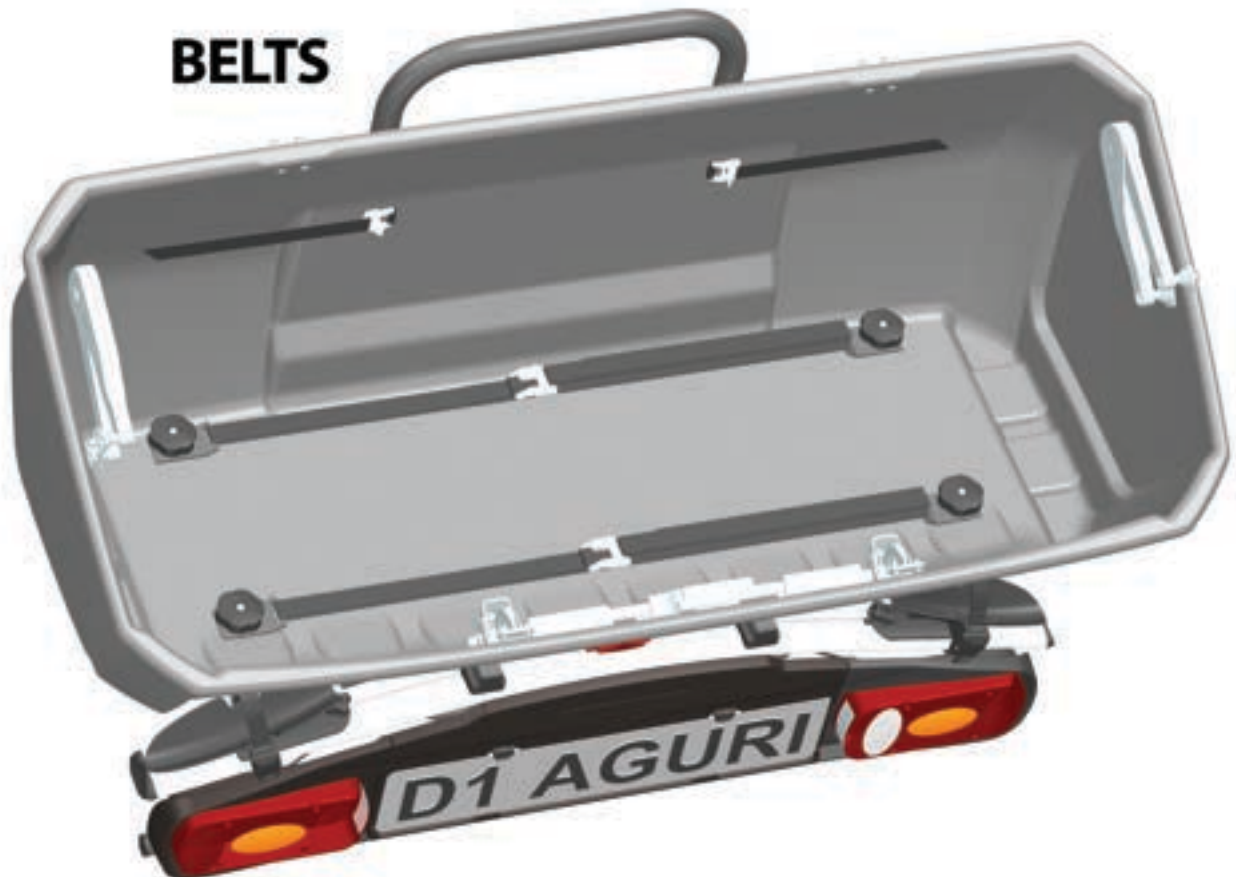

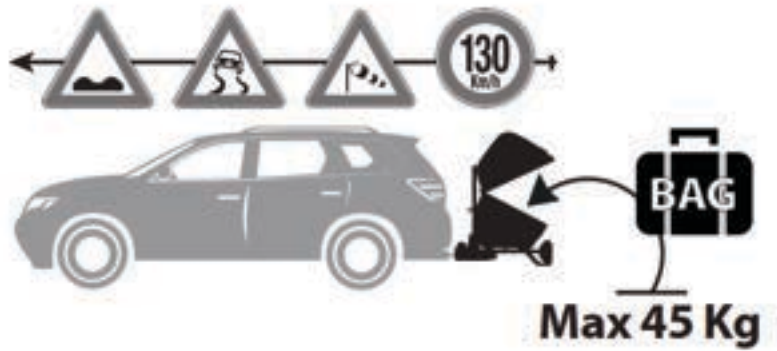

**ACCESSORIES - OPTION**

